

ALEXANDER DEFENSE CORPORATION
254 Chapman Rd, Ste 208 #11656
Newark, DE 19702
Lex@Alexander-Defense.com
Mobile +1-972-750-0116
Reg. 2023707130



AEROSPACE SALES & SERVICE CAPABILITIES LIST 2024

Sikorsky S76

76650-09805-110 M/R Servo	76650-09805-111 M/R Servo
41004076 Manifold Repair	41004077 Manifold Repair
76650-05801-112/113 T/R Servo	76650-05801-114 T/R Servo
76106-08000-049 M/R Damper	76106-08000-050 M/R Damper
1945/2071 Series Main Landing Gear Shock Strut	1945/2071 Series Main Landing Gear Shock Strut
1944/2070 Series Nose Landing Gear Shock Strut	1944/2070 Series Nose Landing Gear Shock Strut
76309-07007-043/044 Engine Tripod Assembly	76309-07007-048/050/053/054 Engine Tube Assembly

Sikorsky UH-60

274000-1027 Primary Servo	274000-1031 Primary Servo
A22785-1 Pitch Trim Actuator	A22785-2 Pitch Trim Actuator
2227000-13 Tail Rotor Servo	2227000-17 Tail Rotor Servo
70106-08100-042 Main Rotor Damper	70106-08100-043 Main Rotor Damper
70106-08100-044 Main Rotor Damper	70106-08100-046 Main Rotor Damper
70410-02450-047 Roll SAS Actuator	274600-1033 Yaw Boost Servo
274600-1045 Yaw Boost Servo	274600-1047 Yaw Boost Servo

Sikorsky S61

S6165-61500-061 Auxiliary Servo	61650-20300-041 Primary Servo
61650-20300-042 Primary Servo	61650-20300-043 Primary Servo
S6110-26400-041 M/R Damper	

Sikorsky UH-60

274000-1027 Primary Servo	274000-1031 Primary Servo
A22785-1 Pitch Trim Actuator	A22785-2 Pitch Trim Actuator
2227000-13 Tail Rotor Servo	2227000-17 Tail Rotor Servo
70106-08100-042 Main Rotor Damper	70106-08100-043 Main Rotor Damper
70106-08100-044 Main Rotor Damper	70106-08100-046 Main Rotor Damper
70410-02450-047 Roll SAS Actuator	274600-1033 Yaw Boost Servo
274600-1045 Yaw Boost Servo	274600-1047 Yaw Boost Servo

Sikorsky S61 Various

HP610100-2C10-1 HP Manifold	S6165-63101-007/008 Retract Cylinder	S6165-63575- Brake Cylinder
S6165-63151-041 Uplock Cylinder	S6165-50581-1/2 Tail Shock Strut	S6125-50204-1 MLG Shock Strut (N Model)
S6125-50301-1/2 MLG Shock Strut (L Model)	S6125-50582-003 Tail Shock Strut	S6110-24056-0 Upper Links
S6140-61130-20/21 Control Rods	S6110-31400-002 Tail Rotor Head	S6140-66604-20 Negative Force Gradient Spg
S6140-62103-001 Mixing Unit	S6110-24041-000 Scissor Bracket	S6112-23071-042 Main Rotor Eye Bolt
S6110-24061-041 Lower Bracket	S6137-23056-2 Gear Set	S6110-24052-0 Lower Links
9550533 Outboard Wheel Half's	9006 Double Park Brake Valve	S6112-33523-102 Pitch Control Arm
S6125-61052 Mast Break Cylinder	S6140-62131-5 Idle Assembly	S6140-62138 Link Assembly
S6110-26406-2 Damper Attachment Lug	S6135-22072-001 Splined Coupling Set	LM307-38 Bracket Assembly
S6135-20701-3 Aft Engine Support	S6110-26410-1 Dowel Plate	S6140-61607-000 Brake Pedals
S6140-20004-000 Support Assembly	S6140-62134-12 Control Rod	

Sikorsky S61

S6165-61500-061 Auxiliary Servo	61650-20300-041 Primary Servo
61650-20300-042 Primary Servo	61650-20300-043 Primary Servo
S6110-26400-041 M/R Damper	

Bell 205

205-076-030-001 Servo	205-076-029-011 Servo
205-076-031-003 Servo	205-076-036-105 Servo
205-076-036-107 Servo	

Bell 206

41103650-009 Servo	41103750-017 Servo
206-076-031-013 Servo	206-076-031-015 Servo
206-076-031-017 Servo (Tactair)	206-076-031-021 Servo
206-076-031-023 Servo (Tactair)	206-076-031-107 Servo
206-076-031-109 Servo (Tactair)	

Bell 206L & 407

206-076-062-001 Servo	206-076-062-003 Servo (Tactair)
206-076-062-005 Servo	206-076-062-107 Servo
206-076-062-101 Servo (Tactair)	206-076-062-103 Servo
206-076-062-105 Servo	

Bell 212/412

212-076-005-007 Main Rotor Servo	212-076-005-011 Main Rotor Servo
212-076-005-101 Main Rotor Servo	212-076-005-103 Main Rotor Servo
212-076-005-105 Main Rotor Servo	212-076-005-107 Main Rotor Servo
212-076-005-111 Main Rotor Servo	212-076-004-005 Tail Rotor Servo
212-076-004-101 Tail Rotor Servo	212-076-004-103 Tail Rotor Servo
41001140-001 SCAS Actuator	41000720 Check Valve
48088820-107 Valve & Filter	48088820-113 Valve & Filter
212-076-006-105 Valve & Filter	

Bell 214B

214-076-146-101 Main Rotor Servo	214-076-147-001 Tail Rotor Servo
-------------------------------------	-------------------------------------

Bell 214ST

214-076-161-101/103 Main Rotor Servo	214-076-161-105/107 Main Rotor Servo
214-076-012-001 SCAS Actuator	

Bell AH-1 Cobra

214-076-010-103 Main Rotor Servo	214-076-010-105 Main Rotor Servo
-------------------------------------	-------------------------------------

AS350

AC67032 Main Rotor Servo	AC67244 Main Rotor Servo
AC67246 Tail Rotor Servo	

206A/B SERIES

206-011-100-021 & Prev. M/R Hub Assy	206-011-100-127 & Sub. M/R Hub Assy
206-010-450-ALL Swashplate Assy	206-040-002-ALL Mast Assy
206-040-002-ALL Transmission Assy	206-040-230-ALL Freewheel Assy
206-040-270-ALL Freewheel Assy	206-040-400-ALL T/R Gearbox Assy
206-040-402-ALL T/R Gearbox Assy	206-011-810-ALL T/R Hub Assy
206-011-810-117, 121 T/R Hub & Blade Assy	(For -400 & -402 T/R Gbx) T/R Pitch Change Mech.
206-040-015-ALL Main Driveshaft Assy	4000371 & 4000397 Rotor Brake Caliper
9440904 Rotor Brake Disc	

206L SERIES

206-011-100-ALL M/R Hub Assy	206-010-450-ALL Swashplate Assy
206-040-014-ALL Mast Assy	206-040-004-ALL Transmission Assy
206-040-270-ALL Freewheel Assy	406-040-500-ALL Freewheel Assy
206-040-402-ALL T/R Gearbox Assy	206-011-810-ALL T/R Hub Assy
206-011-810-013 & Sub. T/R Hub & Blade Assy	(For -402 T/R Gbx) T/R Pitch Change Mech.
206-040-015-ALL Main Driveshaft Assy	4000371 & 4000397 Rotor Brake Caliper
9440904 Rotor Brake Disc	

407

407-010-100-ALL M/R Hub Assy	407-040-011-ALL Mast Assy
406-010-400-ALL Swashplate Assy	407-040-006-ALL Transmission Assy
406-040-500-ALL Freewheel Assy	406-040-400-ALL T/R Gearbox Assy
(For 407 T/R Gbx.) T/R Pitch Change Mech.	407-012-101-ALL T/R Hub Assy
407-011-101-105, -111, -115 T/R Hub & Blade Assy	407-540-304-101FM Rotor Brake Caliper
427-340-352-113 Rotor Brake Caliper	407-340-318-101 Rotor Brake Disc

OH-58A / OH-58C

206-010-100-131, -143 M/R Hub Assy	206-040-003-7, -25 Mast Assy
206-010-450-7 Swashplate & Support Assy	206-040-003-5, -23 Transmission Assy
206-040-230-25 or 206-040-270-3 Freewheel Assy	206-040-100-13 or SKCP2348-5 Main Driveshaft Assy
206-040-100-13 or SKCP2348-5 Main Driveshaft Assy	206-061-432-1, -39 Oil Cooler Blower
T/R Gearbox Assy 206-040-400-9 or 206-040-402-3	T/R Hub Assy 206-011-801-7, -115 or 206-011-810-125

AH-1

M/R Hub Assy 540-011-101-5, -9, -17, -23, -25, -129, -131	Scissor & Sleeve Assy 209-010-401-1, -3, -5, -11
209-011-400-1 Swashplate Assy	209-040-366-1, -3, -5 Mast Assy
209-961-400-3 / 212-040-001-39, -51 Transmission Assy	205-040-263-3, -111 Main Input Quill Assy
212-040-365-33 Hydraulic Pump Quill Assy	204-040-433-101 or SKCP 2381-1 Main Driveshaft Assy
212-040-600-1, -5, -9 Tail Hanger Assy	212-040-003-23 Intermediate Gearbox Assy
212-040-004-9 T/R Gearbox Assy	212-010-701-3, -31, -35, -139 T/R Hub Assy
NPN- For AH-1 T/R Gbx & T/R Assy T/R Pitch Change Controls	204-076-036-005 Master Cylinder Assy

UH-1H

204-011-326-7 Stablizer Bar Assy	204-012-101-5, -19, -31, -137, -139, -141 M/R Hub Assy
204-011-401-9, -11 Scissor & Sleeve Assy	204-011-400-11, -13 Swashplate Assy
204-040-366-7, -15 Mast Assy	204-040-016-1, -3, -5 or 205-040-001-17 Transmission Assy
205-040-004-21 or SKCP2281-103 Main Driveshaft Assy	205-040-263-3, -111 Main Input Quill Assy
204-040-600-1 Tail Hanger Assy	204-040-003-13, -23, -29, -37 Intermediate Gearbox Assy
204-040-012-13 T/R Gearbox Assy	204-011-801-17, -121 T/R Hub Assy
NPN-For UH-1 T/R Gbx & T/R Assy T/R Pitch Change Controls	204-076-036-005 Master Cylinder Assy

UH-1N

204-011-326-7, -13, -15 or 212-011-300-1 Stablizer Bar Assy	204-012-101-9, -23, -29 M/R Hub Assy
204-011-401-17, -19, -21 Scissor & Sleeve Assy	204-011-400-13, -17 Swashplate Assy
204-040-366-15, -17 Mast Assy	212-040-001-7, -19, -23, -35, -107, -111, -159 Transmission Assy
212-040-363-3 or 212-040-263-111 Main Input Quill Assy	212-040-005-3, -7, -11, -103 Main Driveshaft Assy
212-040-600-1, -9 Tail Hanger Assy	212-040-003-7, -23 Intermediate Gearbox Assy
212-040-004-5, -9 T/R Gearbox Assy	212-010-701-3, -31, -35, -139 T/R Hub Assy
NPN- For UH-1N T/R Gbx & T/R Assy T/R Pitch Change Controls	412-040-123-101 Rotor Brake Quill Assy
9450103 or 9450103-1 Rotor Brake Caliper	9440791 or 9440791-1 Rotor Brake Disc
204-076-036-005 Master Cylinder Assy	

204B

204-011-326-ALL Stabilizer Bar Assy	204-012-101-ALL M/R Hub Assy
204-011-401-ALL Scissor & Sleeve Assy	204-011-400-ALL Swashplate Assy
204-040-366-ALL Mast Assy	204-040-009-ALL Transmission Assy
204-040-010-007 Main Driveshaft Assy	204-040-600-ALL Tail Hanger Assy
204-040-003-ALL Intermediate Gearbox Assy	204-040-012-ALL T/R Gearbox Assy
204-011-801-ALL T/R Hub Assy	204-011-800-ALL T/R Hub & Blade Assy
NPN-For 204B T/R Gbx & T/R Assy T/R Pitch Change Controls	204-076-036-005 Master Cylinder Assy

205A-1

212-010-300-ALL Stabilizer Bar Assy	204-012-101-ALL M/R Hub Assy
204-011-401-ALL Scissor & Sleeve Assy	204-011-400-ALL Swashplate Assy
204-040-366-ALL Mast Assy	205-040-001 / 212-040-001 Transmission Assy
205-040-004-ALL or 204-040-433-101 Main Driveshaft Assy	212-040-600-ALL Tail Hanger Assy
212-040-003-ALL Intermediate Gearbox Assy	212-040-004-ALL T/R Gearbox Assy
212-010-701-ALL T/R Hub Assy	NPN-For 205B T/R Gbx & T/R Assy T/R Pitch Change Controls
412-040-123-101 Rotor Brake Quill Assy	9450103-1 Rotor Brake Caliper
9440791-1 Rotor Brake Disc	204-076-036-005 Master Cylinder Assy

205B

212-010-300-ALL Stabilizer Bar Assy	204-012-101-ALL M/R Hub Assy
204-011-401-ALL Scissor & Sleeve Assy	204-011-400-ALL Swashplate Assy
204-040-366-ALL Mast Assy	205-040-001 / 212-040-001 Transmission Assy
205-040-004-ALL or 204-040-433-101 Main Driveshaft Assy	Tail Hanger Assy 212-040-600-ALL
212-040-004-ALL T/R Gearbox Assy	NPN-For 205B T/R Gbx & T/R Assy T/R Pitch Change Controls
212-010-701-ALL T/R Hub Assy	412-040-123-101 Rotor Brake Quill Assy
9450103-1 Rotor Brake Caliper	9440791-1 Rotor Brake Disc
204-076-036-005 Master Cylinder Assy	

212

212-010-300-ALL Stabilizer Bar Assy	204-012-101-ALL M/R Hub Assy
204-011-401-ALL Scissor & Sleeve Assy	204-011-400-ALL Swashplate Assy
204-040-366-ALL Mast Assy	212-040-001-ALL Transmission Assy
212-040-005-ALL Main Driveshaft Assy	212-040-600-ALL Tail Hanger Assy
212-040-003-ALL Intermediate Gearbox Assy	212-040-004-ALL T/R Gearbox Assy
NPN-For 212 T/R Gbx & T/R Assy T/R Pitch Change Controls	212-011-701-ALL T/R Hub Assy
412-040-123-101 Rotor Brake Quill Assy	9450103-1 Rotor Brake Caliper
9440791-1 Rotor Brake Disc	204-076-036-005 Master Cylinder Assy

214B / 214ST

214-040-009-007, -101, -109 Intermediate Gearbox Assy	214-040-011-007, -107, -101, -111, -119 T/R Gearbox Assy
214-040-600-001, -101, -107, -113 Tail Hanger Coupling Assy	214-040-600-005, -103, -109, -111, -115 T/R Hanger Assy
214-040-630-001 T/R Coupling Assy	

412 - 412SP

412-010-100-ALL M/R Hub Assy	412-040-366-ALL Mast Assy
412-010-401-ALL Hub & Sleeve Assy	412-010-402-ALL Swashplate Assy
412-010-408-101 Collective Lever Assy	412-040-002-ALL Transmission Assy
212-040-005-ALL Main Driveshaft Assy	212-040-600-005, -101 T/R Hanger Assy
212-040-003-023 Intermediate Gearbox Assy	212-040-004-009 T/R Gearbox Assy
212-011-701-125 T/R Hub Assy	212-011-701-ALL T/R Hub & Blade Assy
NPN- For 412 T/R Gbx & T/R Assy T/R Pitch Change Controls	412-040-123-101,-105 Rotor Brake Quill Assy
9450103-1 Rotor Brake Caliper	9440791-1 Rotor Brake Disc
204-076-036-005 Master Cylinder Assy	

412HP - 412EP

412-010-100-ALL M/R Hub Assy	412-040-366-ALL Mast Assy
412-010-401-ALL Hub & Sleeve Assy	412-010-402-ALL Swashplate Assy
412-010-408-101 Collective Lever Assy	412-040-004-ALL Transmission Assy
412-040-005-ALL Main Driveshaft Assy	Coupling Assy, T/R Driveshaft 412-040-601-101
Coupling Assy, T/R Driveshaft Hanger 412-040-601-ALL	412-040-600-ALL T/R Hanger Assy
412-040-006-ALL Intermediate Gearbox Assy	212-040-004-ALL T/R Gearbox Assy
212-011-701-125 T/R Hub Assy	212-011-701-ALL T/R Hub & Blade Assy
NPN- For 412 T/R Gbx & T/R Assy T/R Pitch Change Controls	412-040-123-103, -107 Rotor Brake Quill Assy
9450103-1 Rotor Brake Caliper	9440791-1 Rotor Brake Disc
204-076-036-005 Master Cylinder Assy	